



- 1. GND
- 2. Control RX audio in
- 3. GND
- 4. GND
- 5. Control RX COS

- 1. GND
- 2. +V 100ma max
- 3. RX1 Disc audio
- 4. CTCSS Decode COS
- 5. CTCSS Encode emb
- 6. TX1 CTCSS Tone
- 7. GND
- 8. +V 100ma max
- 9. RX1 audio in
- 10. RX1 Filtered Au

- 1. GND
- 2. +V OUT 100ma max
- 3. TX 1 PTT
- 4. Aux 1/Fan
- 5. TX 1 audio out
- 6. RX 1 audio input
- 7. No connection
- 8. Port 1 COS input
- 9. Port 1 CTCSS input

- 1. GND
- 2. +V OUT 100ma max
- 3. Aux 2 / Port 2 PTT
- 4. Aux 3 / Mem Sel
- 5. TX 2 audio out
- 6. RX 2 audio in
- 7. No connection
- 8. Port 2 COS input
- 9. Port 2 CTCSS input

NOTE: R34 IS NOT INSTALLED FROM THE FACTORY. INSTALL IT TO HAVE AUDIO FROM THE CONTROL RECEIVER PROVIDED TO TRANSMITTER 1'S OUTPUT

- 1. Rev D - change power for R46 and R63, removed D4, B9's to gnd, added JP9, R78
- 2. Rev E - Changed text - R76 to R34, was written as wrong value

Integrated Control Systems			
File	LINKER IIA		
Size	Document Number	Rev	
D	996	E	
Date	Sunday, November 12, 2006	Sheet	1 of 1