



- 1. GND
- 2. Control RX audio in
- 3. GND
- 4. GND
- 5. Control RX COS

- 1. GND
- 2. +V 100ma max
- 3. RX1 Disc audio
- 4. CTCSS Decode COS
- 5. CTCSS Encode emb
- 6. TX1 CTCSS Tone
- 7. GND
- 8. +V 100ma max
- 9. RX1 audio in
- 10. RX1 Filtered Au

- 1. GND
- 2. +V OUT 100ma max
- 3. TX 1 PTT
- 4. Aux 1/Fan
- 5. TX 1 audio out
- 6. RX 1 audio input
- 7. No connection
- 8. Port 1 COS 1
- 9. Port 1 COS 2

- 1. GND
- 2. +V OUT 100ma max
- 3. Aux 2 / Port 2 PTT
- 4. Aux 3 / Mem Sel
- 5. TX 2 audio out
- 6. RX 2 audio in
- 7. No connection
- 8. Port 2 COS 1
- 9. Port 2 COS 2

NOTE: R76 IS NOT INSTALLED FROM THE FACTORY. INSTALL IT TO HAVE AUDIO FROM THE CONTROL RECEIVER PROVIDED TO TRANSMITTER 1'S OUTPUT